 


FABER

COFFEE GRINDER

FCG V6016
FCG P6015

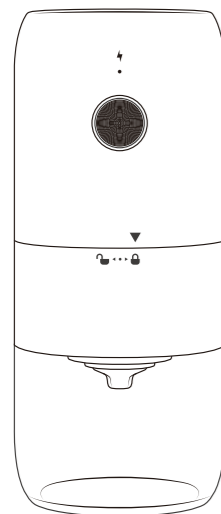

INSTRUCTIONS MANUAL

PLEASE READ THIS INSTRUCTIONS MANUAL CAREFULLY BEFORE USING THIS PRODUCT

EN Thank you for purchasing Electric Coffee Grinder.

BEFORE USING FOR THE FIRST TIME

To ensure safety and maintain the high quality of the product, we recommend that you read and follow the instructions carefully.

- Do not immerse the appliance in water or any other liquid to avoid harm to human or the product.
- Use for roasted coffee beans only, please do not use for other purposes.
- Do not force the grinder to tighten or twist it or attempt to speed up the mechanism.
- Keep body parts (e.g. finger) and utensils away from the grinding burr to avoid damage.
- Keep this product away from children.
- Do not dismantle the product by yourself, otherwise warranty will be invalid.
- Keep away from flammable, explosive gas, high temperature.



This device, its cords, and battery are recyclable.



To be deposited at a waste collection center




Prioritize repair or donation of your device.



PRODUCT DESCRIPTION

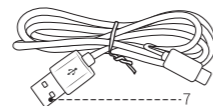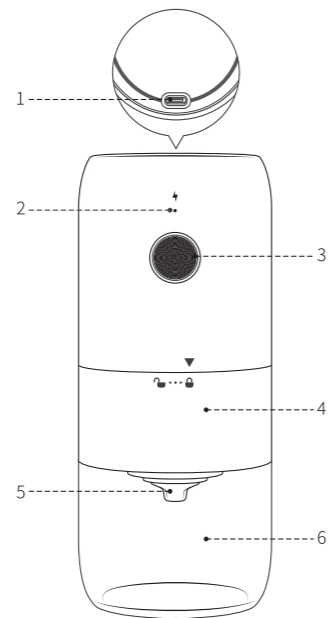


1. Charging Socket
2. Indicator Light
3. ON/OFF Button
4. Coffee Bean Container
5. Adjuster
6. Coffee Powder Container
7. Type-C Charging Cable
8. Brush

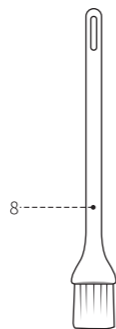

HOW TO CHARGE

- Connect the Type-C charging cable with an adapter, plug the adapter into an electric socket, then connect the charging cable to the Type-C interface at the top of the grinder.
- When charging, the indicator light lights up, indicating it is charging normally.
- The indicator light stops lighting when the battery is fully charged.
- It takes about 3.5 hours to fully charge the battery.

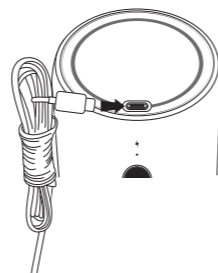


CAUTIONS

- Adapter is not included with this product. Charge only with UL/GS or equivalent safety approved adapters with output voltage of 5V=.
- Low battery warning: If indicator light is flashing during use, it means low battery. Please charge the grinder as soon as possible.
- This is a lithium-battery rechargeable product. When not in use, it is recommended to charge every three months to ensure service life of the battery.

HOW TO USE THE GRINDER

- Rotate and remove the upper body of the grinder according to the indication icons.

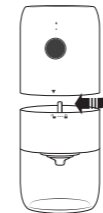


- Put coffee beans into the container, then restore and lock it. (less than 30g each time)


< 30g



- Remove the powder container. Rotate the adjuster for proper grinding coarseness based on coffee making style and taste preference. Restore and lock the powder container

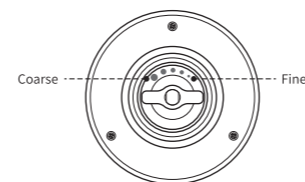

- Press the ON/OFF button to start grinding. It will automatically stop when the grinding is completed, or the user can press the button again to stop it manually.

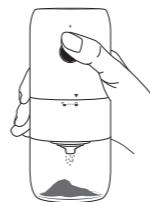

- Rotate to unlock the coffee powder container, then pour out the powder for coffee making.



CAUTIONS

- It is recommended to clean it with a brush. Do not wash it with water.
- Keep it in a cool and dry place.
- If the burr gets stuck when adjusting the coarseness, please rotate the adjuster counterclockwise for a few clicks, and then press the function button to start the motor, thus loosen the burr. (Note: This situation is caused by the characteristics of the ceramic grinding burr instead of product quality, and does not affect the normal use of the product.)
- In the case that product stops working in the middle of grinding, it may be caused by the different features of coffee beans. Long press the button for 3 seconds, then the product shall continue working for at least 3 minutes until finishing the beans, or you can press the button to stop manually.

*This product adopts an adjustment knob. The adjuster could be rotated for multiple circles between the finest and the coarsest grinding.

• Adjust to Fine: Rotate the adjuster from "COARSE" to "FINE". Continue to rotate for a few circles until the desired fineness is achieved.

• Adjust to Coarse: Rotate the adjuster from "FINE" to "COARSE". If the adjuster loosens, it could be caused by some coffee bean grains stuck in the burr. Start the product to rotate for 1 second, then the burr will be loosened and you can continue to adjust. This is a normal situation of ceramic burr and will not affect its normal use.

*If the adjuster falls off, please assemble the components in the orders shown below.



*Attention: Do not clean the main body directly with water. It is recommended to wipe it with a soft, wet cloth. After cleaning, make sure all the parts are completely dry before reassembling.

TROUBLESHOOTING

If the grinder cannot work or stops during grinding:

- Please recharge the grinder and then try again. (Note: It is not recommended to use the product while charging.)
- If it is confirmed that the power is sufficient but the main machine still stops working during grinding, it is normal. You only need to press the switch again to restart grinding.
- If there is abnormal noise during grinding, please turn off the grinder first and rotate the adjuster with counter-clockwise direction.

If the above operations are all correct and the grinder still works abnormally, please contact the vendor for maintenance service.



Dibuat untuk dan diedarkan oleh:
FIMACO SDN BHD
8-2, WISMA FIMAMA,
No.20, Jalan TA/62A,
Bandar Manjara, 52200 Kuala Lumpur, Malaysia.
CUSTOMER CARE CENTRE: +603 6279 8888.

