


Faber

STEAM IRON
FSI-1623

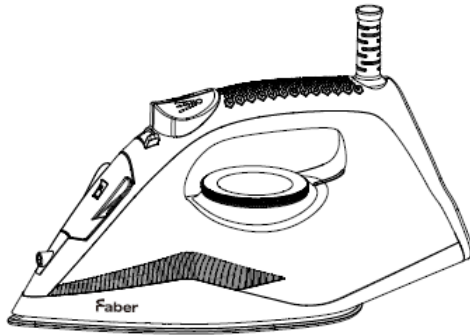

VOLTAGE: 220-240V FREQUENCY : 50-60Hz POWER RATED: 1600W

INSTRUCTION MANUAL

PLEASE READ THIS INSTRUCTIONS MANUAL CAREFULLY BEFORE USING THIS PRODUCT

CONTENTS

Title	Page No.
Safety Precautions	2
Technical Specifications	3
Parts Introduction	4
Operating Instructions	4
Cleaning and Maintenance	5
Troubleshooting	9

SAFETY PRECAUTIONS


1. Ensure that the voltage range shown on the appliance rating label corresponds to the main power supply's voltage.
2. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
3. To prevent damage to the cord, do not pull or wrap it around the appliance and ensure it is stored without twisting or folding it.
4. Do not operate the appliance with a damaged power cord or power plug. Return the appliance for examination, adjustments, or repair.
5. Unplug the unit when not in use and whenever you clean or move the unit.
6. To disconnect the appliance, grip the power plug and pull it from the power outlet. Never yank on the power cord.
7. Only authorized service personnel should be allowed to undertake repairs on electrical appliances. Repairs undertaken by unauthorized persons may result in damage to the appliance and/or accidents or injury to the user.
8. If the power supply cord is damaged, have it replaced by the manufacturer its service agent, or a similarly qualified person to avoid a hazard.
9. High temperature is generated during use, which may result in burns or other injuries.

10. The iron should never be left unattended while it is still connected to the power supply.
11. Always use the handle and warn others (especially children) of the possible dangers (e.g. burns from steam or hot water, especially when ironing vertically).
12. The iron should be used strictly in accordance with these instructions. We will not accept liability for any damage caused by non-compliance with these instructions, or any other improper use or mishandling.
13. **CAUTION:** Ironing over zippers/rivets on jeans, etc. may scratch or damage the soleplate.

TECHNICAL SPECIFICATIONS

Model	FSI-1623
Power Supply	220-240V~ 50-60Hz
Power Consumption	1600W
Product Size	255(L) x 110(W) x 130(H)MM

PARTS INTRODUCTION

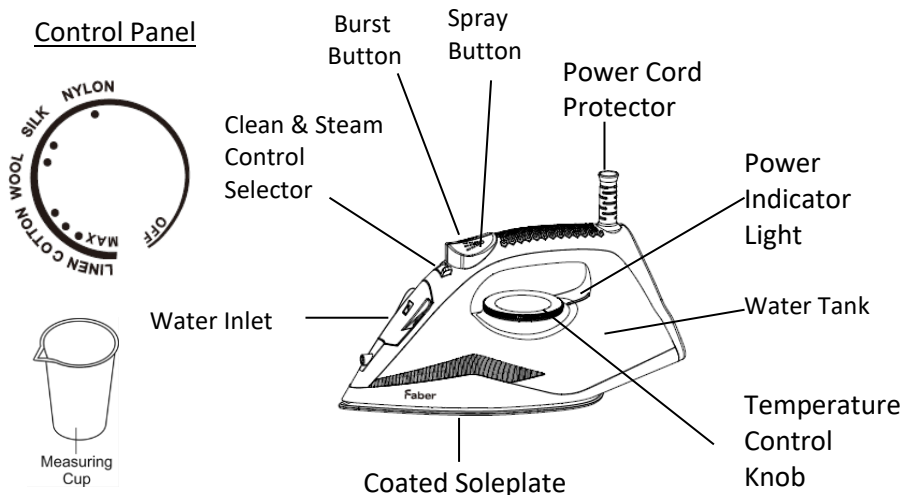

FEATURES

Self-clean

- To prevent a build-up of lime scale inside the iron. Self-clean allows you to purge left over water and scale from the iron. This function usually creates a concentrated burst of steam which forces lime scale out through the steam holes.

OPERATING INSTRUCTIONS

Before the First Use

- If there is a sticker or protective foil on the soleplate, remove it before using the iron.

- Before operating the appliance, ensure that the voltage indicated on the appliance matches the mains voltage in your home. If there is any discrepancy or if the voltage is not stated, do not use the appliance and contact your dealer for assistance.

Note:

- **Due to product function test after assembly, it is normal to see slight water retention in the water tank during first use.**
- **Some parts of the iron have been slightly greased. This may cause the iron to emit some smoke when you switch it on for the first and will cease shortly. This is normal.**

Filling the Water Tank

1. Set the steam control selector to position “” to prevent water from entering into the steam chamber and to avoid water dripping from the steam holes.
2. Fill the water tank with measuring cup. Note: NEVER fill the water exceeding the “MAX” level.
3. Add some water when the water level is too low, except for dry ironing.
4. Wipe clean any water outside of the water tank. When finish ironing, please empty the water tank.
5. Normal tap water can be used. However, it is advisable to use distilled water.

Temperature Setting Guide

Follow the temperature setting guide provided at the label attached for your reference. Match the number of dots on the label to the number of dots on the temperature control dial.

If there is no label, use the following guide to select the temperature to use:

Cloth Type	Instruction Label	Temperature Control
Synthetics (e.g.: acrylic, nylon, polyester, viscose)	•	Low
Silk, wool	••	Medium
Cotton , linen	•••, MAX	Medium & High

Ironing Hints

- The iron heats up quicker than it cools down. Start by ironing the articles requiring the lowest temperature first before proceeding to those which requires higher temperatures.
- If the article is made of a mixture of different fabrics, always select the lowest ironing temperature of the composition.
- Iron the reverse side of the silk or synthetic materials so as to prevent shiny spots and marks.

Dry Ironing

1. Place the iron vertically and set the temperature control dial at “MIN”.
2. Set the steam control selector to position “”.
3. Set the temperature control dial according to your fabric.
4. You may start iron when the indicator light turns off.

Spray Function

1. Use the spray function to moisten the article to be ironed. This helps to remove stubborn creases.
2. Fill water tank with water.
3. Press the water spray button several times when ironing, especially on heavily creased article.

Steam Ironing

1. Fill the water tank with water.
2. Set the steam control selector to the “” position.
3. Steam ironing is only possible at higher temperature settings between “•••” and “MAX”, otherwise, water may leak from the soleplate when water is not fully converted to steam.

Burst Steam

1. Fill water tank with water.
2. Set the steam control selector to the “” position.
3. Press the burst steam button to enhance the distribution of steam into every part of the article to be ironed.
4. Burst steam can only be used at temperature settings between “•••” and “MAX”.
5. Press and release the burst steam button when you hold the iron in vertical position for removing creases from hanging clothes, curtains, etc.

CLEANING & MAINTENANCE

1. Before cleaning, turn the temperature knob to position “MIN” and unplug the power. Stand the iron upright and let the iron to cool completely before it is cleaned and stored.
2. The appliance can be cleaned with a damp cloth. Do not use abrasives on the soleplate.
3. Wipe the soleplate with a damp cloth and a non-abrasive cleaner.
4. Ironing over zippers/rivets on jeans, etc may scratch the soleplate.
5. Open the water tank cover. Lift up the iron with the filling inlet facing downwards to empty any remaining water from the tank and ensure it is completely empty.
6. Connect the iron to Mains electrical supply and turn the temperature control dial to “MAX” position to evaporate the remaining water in the water tank.

7. After the water has completely evaporated, set the temperature control dial to “MIN” and unplug the iron from Mains electrical supply.
8. Stand the iron upright and let it cool down.
9. Store the iron after it has gradually cooled down, loosely wrap the cord around the heel of the iron and always place the iron in vertical position.
10. When it is necessary, the exterior surfaces and soleplate may be cleaned with a soft damp cloth. Never use any chemical or abrasive solution to clean the iron.
11. **CAUTION:** Never use scouring pads, abrasive or harsh cleaners as this may scratch the surface.

Self Clean

IMPORTANT: An user should also perform Self-clean once every 3 months to prolong the life of your iron. If water in your area is very hard, or you see scales coming out from the soleplate during ironing, use this function more frequently.

1. Make sure the iron is unplugged and the steam slider is set to dry setting.
2. Fill the water tank to the MAX indication.
(Do not pour vinegar or other descaling agents into the water tank.)
3. Plug in the iron and set the temperature dial to MAX.
4. Unplug the iron when the temperature light goes out.
5. Hold the iron over the sink. Slide the **(clean)** button and gently shake the iron forth and back until all water in the water tank has been used up. Scales is flushed out; steam and boiling water also come out of the soleplate.
Note: Repeat steps 2 to 5 if the water that comes out of the iron still contains scale particles.
6. Plug in the iron and let the iron heat up to dry the soleplate.
7. Unplug the iron when the temperature indicator light goes out.
8. Move the iron gently over a piece of cloth to remove any water stains on the soleplate.

TROUBLESHOOTING

Problem	Possible causes	Solution
Soleplate does not heat up	Connection problem	Check the plug and mains.
	The temperature dial is in "Min" position.	Set the temperature dial to the correct temperature for your fabric.
Temperature is high or low	The temperature control dial is not in the correct position.	Set the temperature control dial to the correct position.
Water is spilled	Steam control is not closed.	Change the steam control to "  " position.
No Steam	Temperature control dial is not in the correct position.	Set the temperature control dial to the correct position.
	The steam control is in the "  " position.	Set the steam control to "  " position.
	There is no water in water tank.	Fill in water.
	The iron is not hot enough.	Wait until the pilot light goes off before ironing.
	Water is over the "Max" position.	Discard some water.
Too little steam	Inadequate water.	Fill in water to the correct level.
	Blockage in the water tank or soleplate holes.	Clean (set the temperature dial to max temperature, set steam control to "  " position.)

Spraying function does not work	Air in the water pump	Stop up the spray nozzle, then press spray button several times.
	No water or insufficient water.	Fill in water.



This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



Dibuat untuk dan diedarkan oleh:
FIMACO SDN BHD
8-2, WISMA FIAMMA,
No.20, Jalan 7A/62A,
Bandar Manjalara, 52200 Kuala Lumpur, Malaysia.
CUSTOMER CARE CENTRE: +603 6279 8888

