

FABER

RICE COOKER

FRC-V401



POWER RATED: 400W VOLTAGE: 220-240V~ FREQUENCY: 50-60Hz

INSTRUCTIONS MANUAL

PLEASE READ THIS INSTRUCTIONS MANUAL CAREFULLY BEFORE USING THIS PRODUCT

General Safety Precautions

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
2. This appliance is intended for indoor and household use only, not for outdoor, commercial, or industrial use.
3. Keep the appliance and its power cord out of reach of children. Children should be supervised to ensure that they do not play with the appliance.
4. Do not use or place the appliance in a sink, on a hot surface, near a heat source, or near the edge of a table or counter.
5. To protect against fire, electric shock, and injury, do not immerse the power cord, plug, or appliance in water or other liquids.
6. Ensure that the voltage indicated on the Rating Label corresponds to the local power supply.
7. Do not leave the appliance operating unattended for an extended period of time.
8. Always place the appliance on a flat, level, and dry surface.
9. The appliance must be switched off and the mains plug removed from the wall socket after each use, and before cleaning and maintenance.

1

Instructions**Cook Rice**

1. Measure out the rice.
Use the attached cup to measure out the needed rice.
1cup : 0.18 litres, about 150g
2. Wash the rice
Use other utensils to wash the rice clean. That washing rice directly in the pot is not allowed, in order to avoid abrading the coating or deforming the base.
3. Add water
Put the washed rice into the pot and distribute evenly in the pot, (uneven distribution will cause bad cooking effect) add moderate water according to the rice quality and one's taste.
4. Place the pot into the housing.
Wipe the water, sticking stains away from the outside of the pot, check and clean the pot base and the heating plate, place the pot into the housing, rotate lightly to ensure a full contact between the a click sound is heard.
5. Close the covers
Close the stainless steel lid. During the cooking, do not touch it!
6. Connect power
After attaching the plug to the appliance, plug cord into the outlet, the power indicator will illuminate then, which means power has got through.
7. Cook food
Push down the cooking button, the cooking indicator illuminates and cooking begins.
8. Stew food
When all the water in the rice has been dried away, the cooking button bounces off automatically, the cooking indicator goes off and the warm keeping indicator goes on, keep this state for fifteen minutes to improve the food's colour, flavour and taste.

2

Keep Warm

1. If not for immediate enjoyment, the cooker will keep the food warm at 70 centigrade automatically.
2. Unplug from the outlet and the appliance in time after cooking.

Cleaning & Maintenance

1. Take out the pot, wash them with water and wipe dry.
2. Wipe the outside of the pot and clean it with soft cloth.
3. Do not use steel scourer or other coarse or abrasive cleaners to clean the pot, these will damage the surface.
4. In case that rice grain or other stains may be attached to the heating plate, 320# sand paper is used to rub them away, then wipe the heating plate clean with soft cloth to ensure full contact between the pot and the heating plate.

3

Important Safeguards

Use plug to ensure the appliances to be earthed; ensure that the voltage indicated on the appliances corresponds with mains voltage.

Ensure the pot base and the surface of the heating plate dry and clean to avoid electronic break down.

Protect the pot against bump may cause the pot to be deformed. Never use the pot on other heat sources.

Place the appliances on a stable level surface; never place the pot on something that causes fire easily.

Do not be so near to the appliances' steam nozzle when cooking. Face or hands may be scalded by steam.

Never wash the housing with water or place the housing directly into the water, this will cause power failure.

Use the attach plastic spoon to take food out; such spoons as metal spoons may scratch the pot base and damage the coating.

No not cover the steam nozzle while cooking. This will cause the cooker to be deformed.

Never disassemble the electric cooker on your own, this may influence the cooker's safety features.

The cover handle is only used to open the cover. Never use the handle to pick up and move the rice cooker, especially when filled with food, scalding would happen otherwise.

4



Dibuat untuk dan diedarkan oleh:
FIMACO SDN BHD
8-2, WISMA FIMAMA,
No.20, Jalan 7A/62A,
Bandar Manjalara, 52200 Kuala Lumpur, Malaysia.
CUSTOMER CARE CENTRE: +603 6279 8888.

CB