

MAINTENANCE PROCEDURES

1. Remove inner pot and lid and wash them in hot soapy water, taking care to rinse completely, then dry with a soft cloth.
2. Clean outside of cooker with a clean damp cloth. Never clean any part of the cooker with abrasive cleaner. Use a damp cloth or sponge with water and mild dish detergent. Do not submerge any part of cooker in water. Wash only inner pot and lid.
3. To clean the heating plate and thermo-control plate, use steel wool to polish or remove any residue. Then wipe with a damp cloth. Allow to dry completely before re-using. You must keep the heating plate and thermo-control plate free from any foreign objects, otherwise the cooker will not operate properly.
4. Improper cleaning of cooker may cause unpleasant odors.
5. Any residue to the vinegar or salt may cause pan to corrode.

HOW TO USE

1. Using the measuring cup provided in the package, measure and add rice to the inner pot.



2. By measuring cup, add amount to water to the rice inside the inner pot according to the following standard:

Cups of Raw Rice	Water add to the line on pot
15 cups	15 - 15 1/2 cups
14 cups	14 - 14 1/2 cups
12 cups	12 - 12 1/2 cups
10 cups	11 - 11 1/2 cups
8 cups	9 - 9 1/2 cups
6 cups	7 - 7 1/2 cups
4 cups	5 - 5 1/2 cups

3. Set inner pot in cooker. Place rice and water in inner pot. Close the lid firmly. Turn pan gently to right and left. Close the cover firmly.
4. Plug in power cord. Do not plug in until ready to cook. Otherwise, rice may be spoiled. If pot is not in cooker, cooking will not begin.
5. Press switch. "cook" indicator tells you cooking has started.
6. When rice is done, the switch will pop up. After the switch pops up, leave covered for at least 15 minutes to steam rice.
7. Unplug after each use. Grasp the plug, not the cord.
8. When you stew, the water level should not more than 70% of the volume.
9. Do not attach the ventilating hole for fear scalding.
10. The appliance must not be immersed in water.
11. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
12. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacture or its service agent.
13. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

IMPORTANT SAFEGUARDS

When using your electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions carefully.
2. Do not touch hot surfaces, use handles or knobs.
3. To protect against electrical shock do not immerse cord, plugs, or main body in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer and may cause injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or heated oven.
11. Extreme caution is a must when moving an appliance containing hot oil or other liquids.
12. Always attach the plug to the cooker first, and then plug cord into the wall outlet. To disconnect, turn any control to "off" then remove plug from wall outlet.
13. Do not use appliance for other than intended use.

General Safety Precautions

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
2. This appliance is intended for indoor and household use only, not for outdoor, commercial, or industrial use.
3. Keep the appliance and its power cord out of reach of children. Children should be supervised to ensure that they do not play with the appliance.
4. Do not use or place the appliance in a sink, on a hot surface, near a heat source, or near the edge of a table or counter.
5. To protect against fire, electric shock, and injury, do not immerse the power cord, plug, or appliance in water or other liquids.
6. Ensure that the voltage indicated on the Rating Label corresponds to the local power supply.
7. Do not leave the appliance operating unattended for an extended period of time.
8. Always place the appliance on a flat, level, and dry surface.
9. The appliance must be switched off and the mains plug removed from the wall socket after each use, and before cleaning and maintenance.

SAVE THESE INSTRUCTIONS.

* These units are "household use"

Preheating of the appliance is not necessary.

OPERATING INSTRUCTIONS:

Please read this instruction carefully before using the appliance.

CAUTIONS TO READ BEFORE USING RICE COOKER:

1. Only use this product with the correct AC voltage outlet.(Correct rated voltage are label at the bottom of rice cooker.)
2. Be sure to unplug AC cord when pan is not in cooker, or when cooker is not being used. Remember the "KEEP WARM" feature operates whenever the cord is plugged in
3. Place the inner pot inside the cooker before operating. Turn the pot gently to right and left.
4. If the switch button is difficult to press to the "cook" position, do not try to force it down. This difficulty usually occurs when inner pot is of fully inserted in cooker or when cooking has just finished.
5. Place the lid on your inner pot while cooking, keep the lid in place after serving to prevent your rice from drying out or discoloring.
6. Keep bottom of inner pot and surface of heater plate free to prevent operating malfunctions.



1. Do not boil water for first usage as it is easy to destroy the oxy-generation coating, the correct method of using the rice cooker for first time usage should be thoroughly cleaning the inner pot before cook.



2. Do not cover the vent with cloth while cooking .



3. Not to be used directly over cooker burner fire. The inner pot cannot be reused once heated by fire .




4. Do not leave any liquid on the bottom of the rice cooker and do not put it near a cooking stove or burner.



5. It is not allowed to wash the inner body once the inner pot has been taken out.




6. It is not allowed to wash rice in inner pot otherwise it will damage the Non-stick coating.

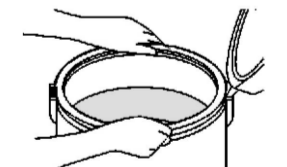

7. Please adjust the inner pot and make sure it is in a standard level while putting into rice cooker inner body .



8. Do not touch the vent when cooking.

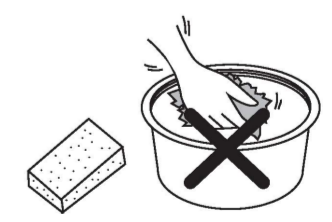

9. It is not allowed to wash and scrub the inner pot by steel wire and hard object. Please use the enclosed sponge which as gift inside the rice cooker .

FABER

RICE COOKER

FRC-7010

FRC-7018

FRC-7028



POWER RATED: 400W -1000W VOLTAGE: 220-240V~ FREQUENCY: 50/60Hz

INSTRUCTIONS MANUAL

PLEASE READ THIS INSTRUCTIONS MANUAL CAREFULLY BEFORE USING THIS PRODUCT

RICE COOKER



Dibuat untuk dan diedarkan oleh:
FIMACO SDN BHD
8-2, WISMA FIAMMA,
No.20, Jalan 7A/62A,
Bandar Manjalara, 52200 Kuala Lumpur, Malaysia.
CUSTOMER CARE CENTRE: +603 6279 8888.

